 


Connections Guide

1 Aerial Connections

 
- Connect the cable from the satellite dish to LNB IN.
- Optional 3rd Tuner
 - 2x SAT tuners fixed, 1 more optional tuner slot for Satellite or Terrestrial/Cable reception (*Note)
 - Connect the cable from the antenna to ANT IN. (Optional tuner)
 - Connect the cable from the satellite dish to LNB IN. (Optional tuner)

* Note : Hybrid 3rd tuner module supports both Terrestrial & Cable reception.

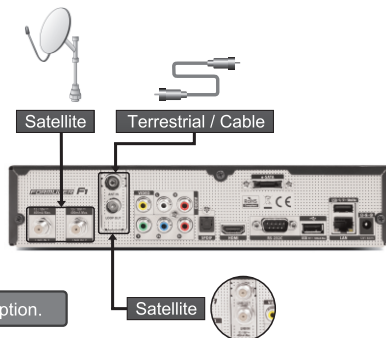


2 Digital A/V Output Connections

- Connect the HDMI Cable to the HDMI Connector of your TV.
- Connect SPDIF to Digital audio input of the equipment (Digital Audio)

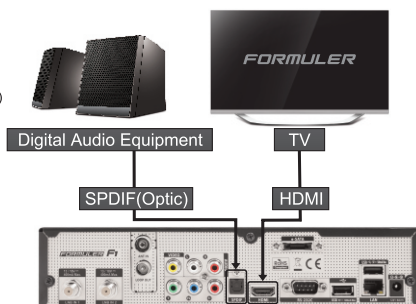

3 Composite Video Connections

 - Connect the Component to the Component input of your TV.
- Connect the RCA to the RCA input of your TV.

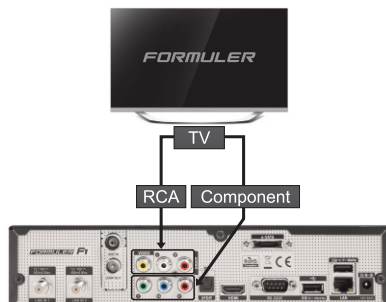





Troubleshooting

Problem	Solution
No or Bad Signal	<p>For Satellite tuner module</p> <ul style="list-style-type: none">• Check the LNB ; Replace the LNB if necessary.• Check the cable from the LNB.• Check the position of the dish; realign dish if necessary.• If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch. <p>For Terrestrial tuner module</p> <ul style="list-style-type: none">• Check the connection of Aerial antenna line. <p>For Cable tuner module</p> <ul style="list-style-type: none">• Check the connection of Broadcasting Cable line. <p>Common features for all types of DVB receivers</p> <ul style="list-style-type: none">• Check the 'Signal Level' and the 'Signal Quality'.
Poor picture quality	<ul style="list-style-type: none">• See 'No Picture' above.• Check the signal level, if this is low then tries adjusting the alignment of your dish.
No Picture	<ul style="list-style-type: none">• See 'Does not display any message on the front panel' above.• To match the STB system with your TV system (PAL/NTSC), press V.Format button until a picture is displayed.• Check the video output port is firmly connected to the TV or VCR.• Check that you have selected the Video Input on your TV.• Check the brightness level of the TV.• Check the resolution that your TV supports, and set the proper resolution with the remote <i>Resolution</i> button to obtain a picture.
Does not display any message on the front panel.	<ul style="list-style-type: none">• Check the main power cable and check that it is plugged into a suitable power outlet.
No Sound	<ul style="list-style-type: none">• See 'No Picture' above.• Check the volume level of the TV and STB.• Check the Mute status of the TV and STB.
Remote Control does not operate	<ul style="list-style-type: none">• Point remote control directly towards the STB.• Check that the STB button lights up when you press any button.• Check and replace batteries.

Included Accessories

				
Remote control	Batteries	Power adapter	HDMI Cable	Quick Installation

Separately purchased Accessories

			
RCA Cable	3rd Tuner Satellite	3rd Tuner Terrestrial / Cable	Wi-Fi Dongle